



GLASS BOTTLES

CLEANING AND USER GUIDE

WHY DO I HAVE TO CLEAN THE BOTTLE & CAP?

By the time the bottles reach you, they have gone through manufacturing, printing and transport processes. Therefore, please rinse them thoroughly before using them for the first time. To keep the bottles in a hygienically perfect condition, they should be **cleaned regularly**. How often a bottle needs to be cleaned depends on how much the bottle is used, in which situations and for which liquids. The good thing about our borosilicate bottles – thanks to the high boron content – they **do not absorb any odours or flavours**. This means that the bottle can be used one day for juice and another day for water.



HOW DO I CLEAN MY BOTTLE?

Our unprinted water bottles are **dishwasher-safe** and **heat-resistant** and can therefore be easily cleaned either in the dishwasher (up to 100°C) or with hot water. The best way to do this is to fill the bottle with washing-up liquid and hot water and shake it. Other **home remedies** include baking soda, vinegar cleaner, rice grains and lemon juice. A long dishwashing brush is also a great help to clean the bottom thoroughly.



WHAT IF MY BOTTLE IS PRINTED?

No problem. Our printed water bottles are also suitable for **cleaning in dishwashers** – including professional use. To prolong the durability of the print, we still recommend occasional hand-washing with warm water. This prolongs the durability of the print. When using a dishwasher, please make sure that no other dishware rubs against the print during the wash cycle or when unloading the machine. The print may temporarily soften during washing – this is completely normal – and should be allowed to dry briefly afterwards.



GLASS BOTTLES

CLEANING AND USER GUIDE



HOW OFTEN DO I CLEAN MY BOTTLES AND CAPS?

We generally recommend that the bottles and caps, if they are only filled with water, should not be put in the dishwasher every day. Rinsing in hot water in the evening and dishwasher cleaning, e.g. every 1-2 weeks is sufficient. This helps to prolong the life of the print.

HOW DO I CLEAN MY CAP?

Our closures are sensitive little things and therefore need a lot of love when cleaning. We therefore recommend not to clean the caps in the dishwasher. It is best to clean them gently with a little **washing-up liquid and a cloth** (be careful with coarse brushes as they can scratch the cap). *Stainless steel caps* can also be soaked in a soap and water mixture. *Bamboo closures* are somewhat more water-sensitive. The **silicone ring** inside can also be easily removed and cleaned separately. Then simply reinsert it and the bottle is ready for the next use.



MATERIAL BOROSILICATE

Borosilicate glass is made at high temperatures and therefore offers exceptional product properties such as heat and chemical resistance, high impact resistance and light weight. But also borosilicate is a glass which, under a certain amount of mechanical impact, can break. No glass, **not even borosilicate glass**, is unbreakable.

USE WITH CARBONATED AND HOT DRINKS

To ensure the integrity of the product when using bottles with carbonated beverages or hot drinks, we recommend **filling the bottle only to approx. 90%**. This reduces the pressure build-up in the bottle and helps to avoid damage.